
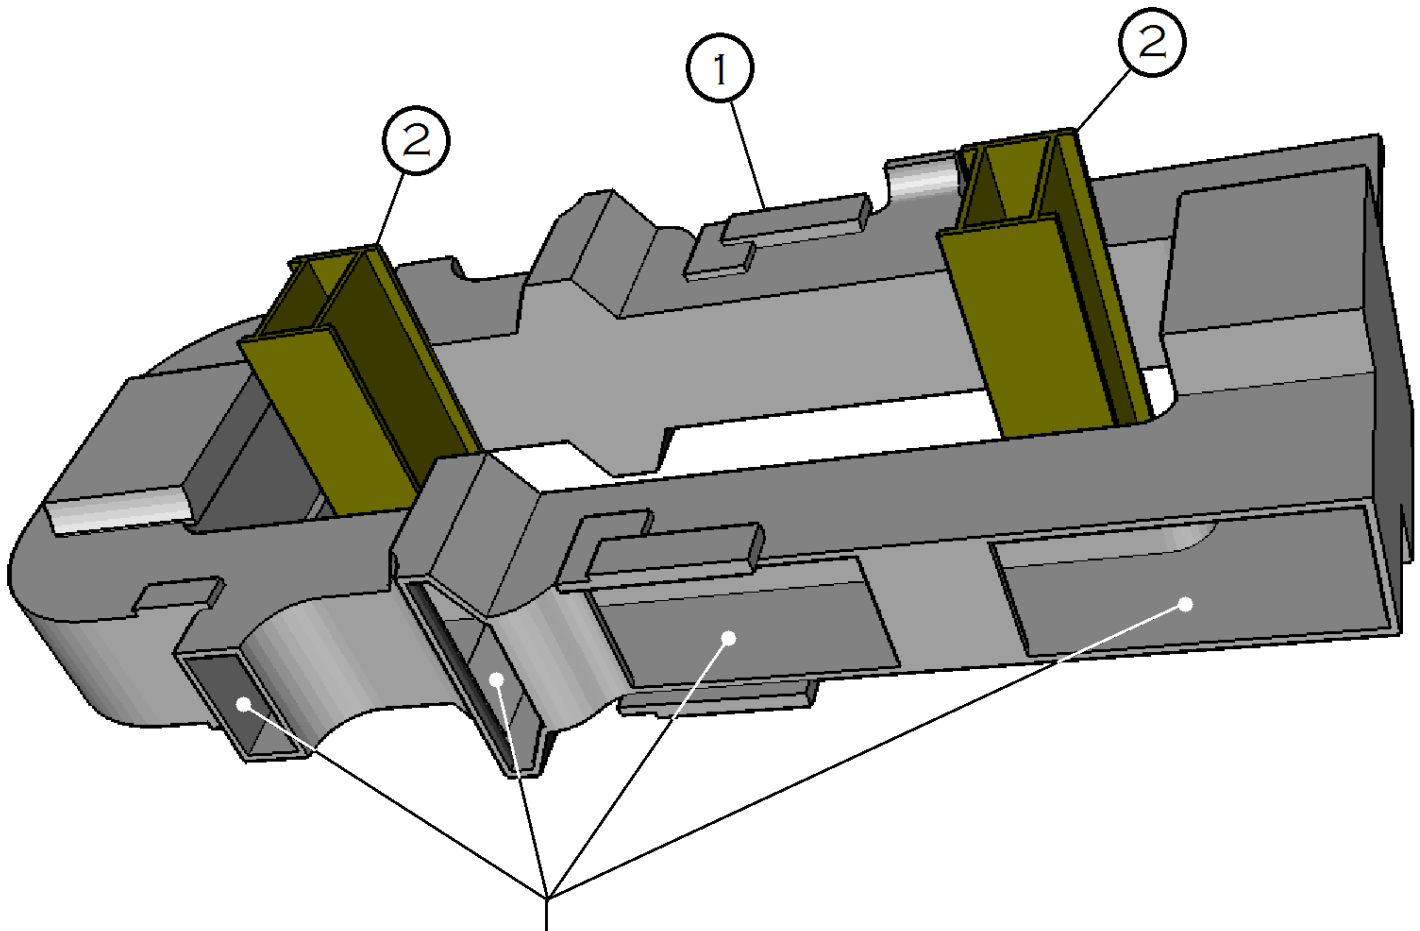
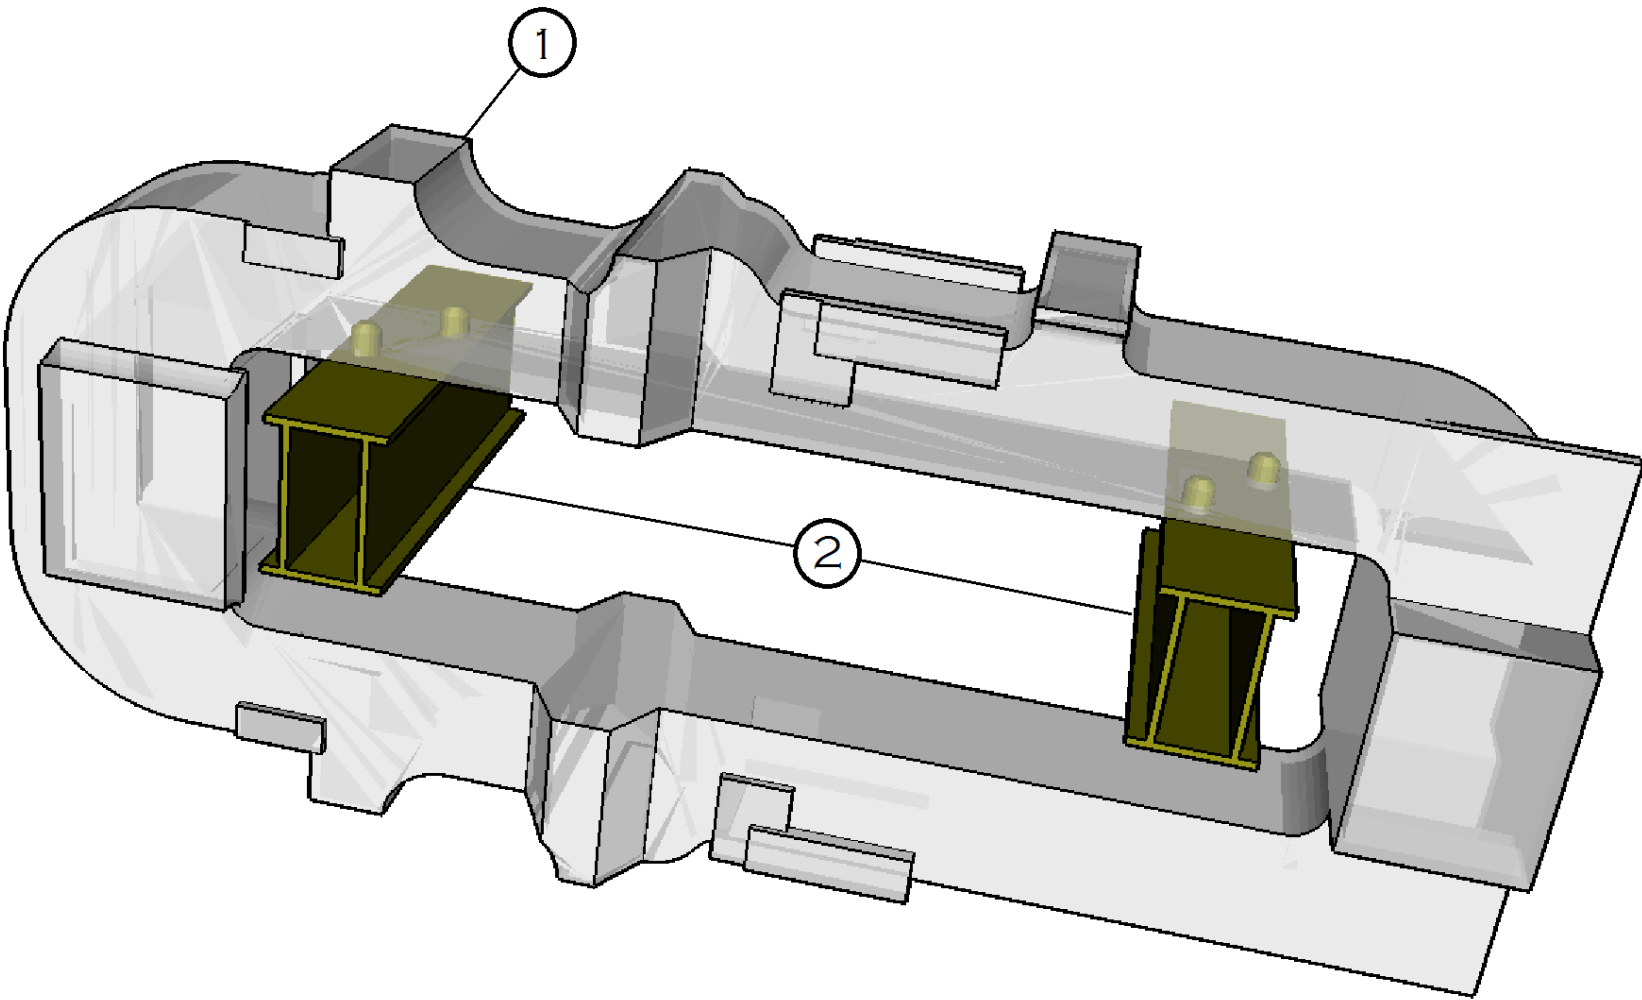
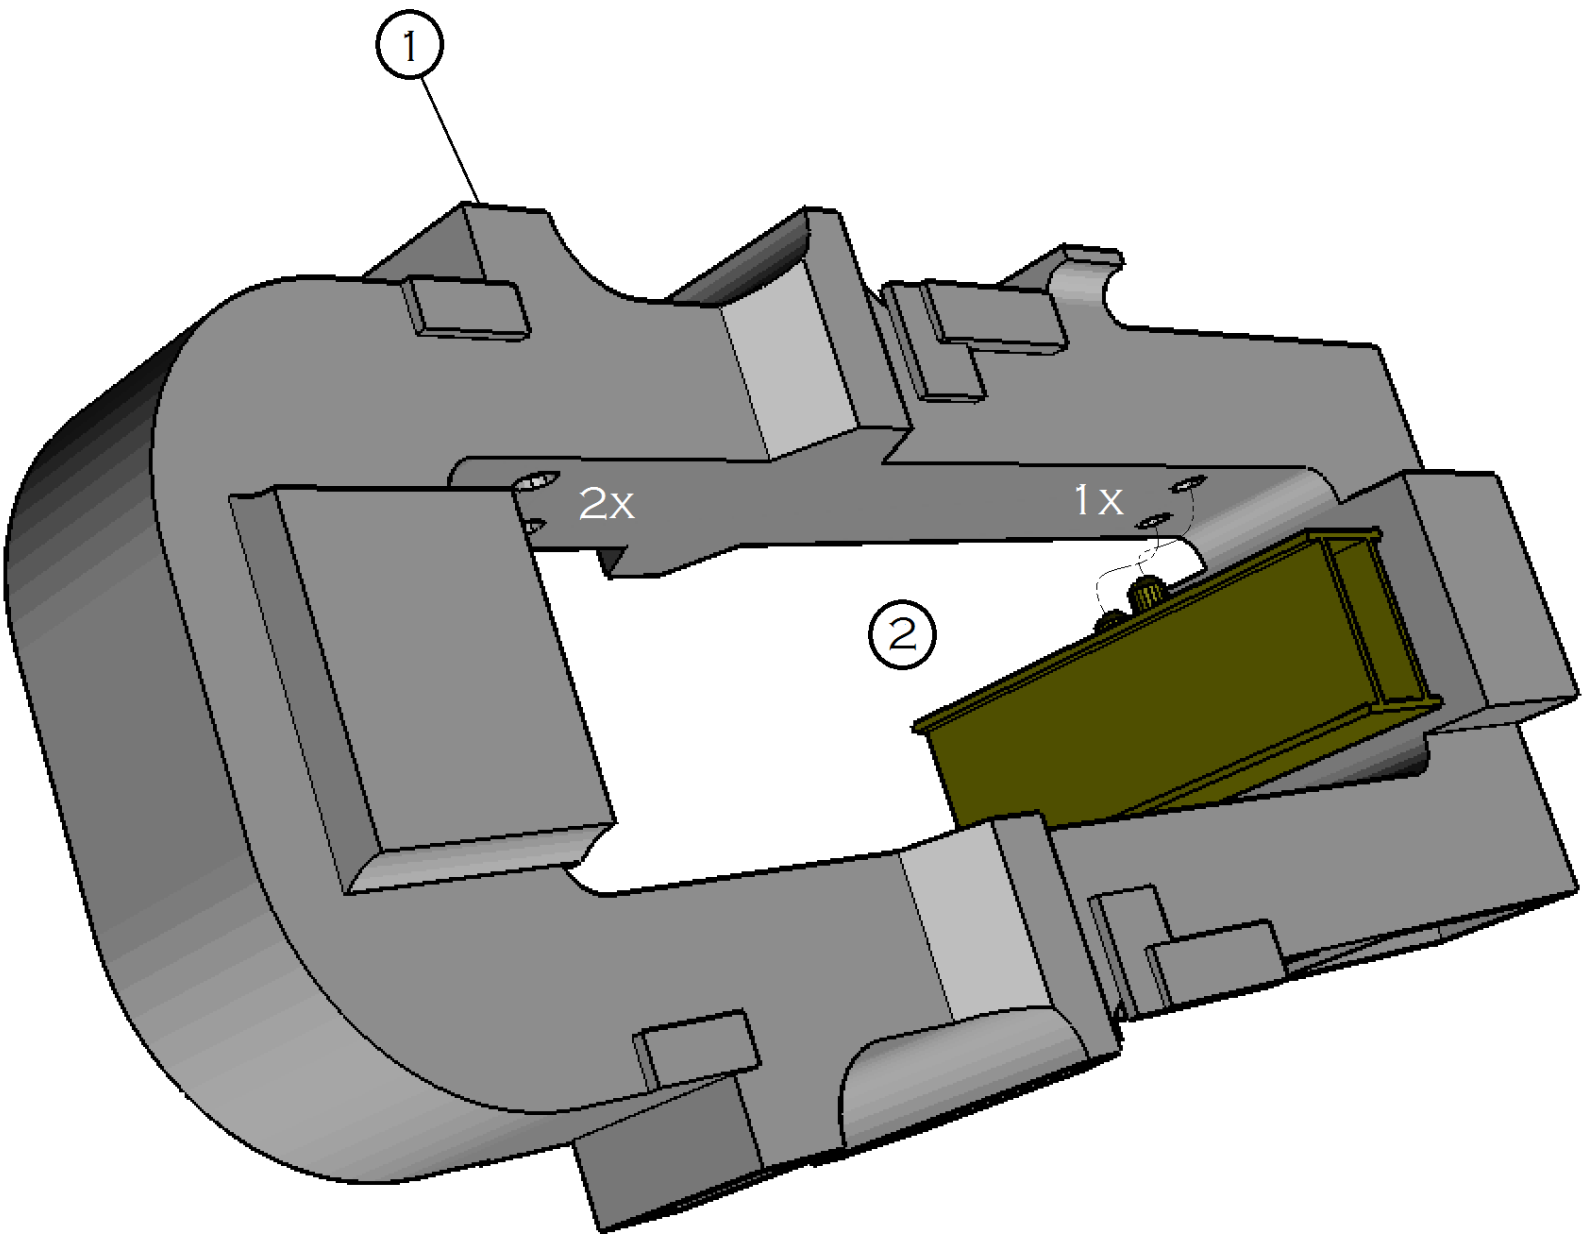


# KEYSTONE DETAILS PRR FLAT CAR CLASS FW1 STAMPING MACHINE SIDEFRADE LOAD KIT

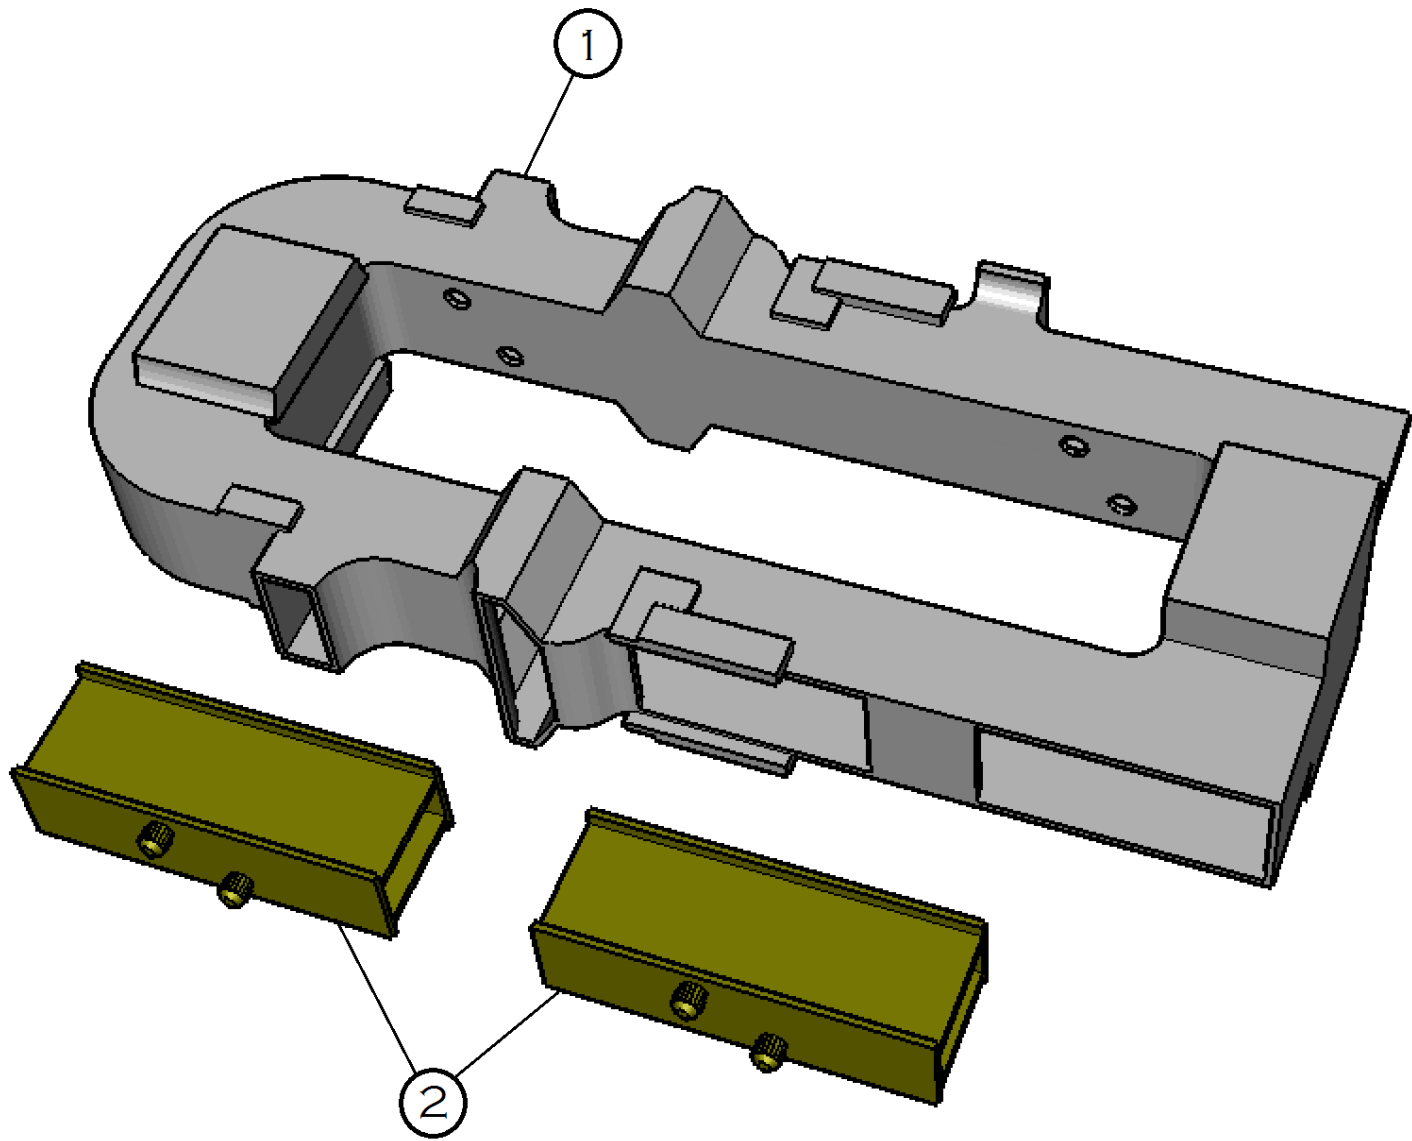

NOTE: OPEN AREAS OF SIDEFRADE SHOULD FACE DOWN WHEN INSTALLED ON FW1 CENTER FRAME